

Operating Manual



FOX-2C1



FOX-2C2

1 Caution

※ Safety and Hazard Instructions

⚠ Safety

Pls use this item after installing the duplex safety device in which is applied at dangerous factors such as serious human injury or serious damages of property & important machine because this item is not designed as safety device

⚠ Safety Instruction and Hazard Warnings

- Please read the operating manual throughly before putting the device into operation
- We will not assume any responsibility for damage to assets or persons caused by improper handling or failure to observe the safety instructions or hazard warnings
- For safety and licensing reasons, unauthorized conversion and/or modification of the device is not permitted.
- Do not exceed the maximum permissible current – in case of higher loads, use a contactor of adequate power. Make sure that the supplied voltage matches the values specified for the instrument.
- The device must be adequately protected from water and dust as per the application and must be accessible via the use of appropriate tools
- The device must not be exposed to extreme temperature, sunlight, strong vibrations or high levels of humidity.
- Operation or installation is not permitted under unfavorable ambient conditions such as wetness or excessive induction loads or solenoid and dust, combustible gases, vapors or solvents, especially high-frequency noise
- Avoid operation or installation close to high-frequency fields such as welding devices, sewing machines, wireless transmitter, radio systems, SCR controller, etc
- Do not install the sensor cable nearby signal cable, power cable, load cable.
- Please use the shield cable when the sensor cable's lengthen, however do not make it too much longer
- Please use the sensor cable without any cutting or flaw, blemish.
- The device is not a toy and should be kept away from children
- Installation work must only be carried out by suitably qualified personnel who are familiar with the hazards involved and with the relevant regulations.
- You shouldn't tinker with anything or the product may not be opened or disassembled unless you know what you're doing.
- Please ask us about this questioning


⚠ Danger

Attention! Never work on electrical connections when the machine is switched on

2 Operation Manual

Model	Sensor	Temp.range	Size(mm)	Output	Function
2C1	K(CA)	-50℃~1200℃	77(W)x35(H)	100~240VAC 50/60Hz	Temp.
2C2	K(CA)	-50℃~1200℃	77(W)x35(H)	100~240VAC 50/60Hz	Temp.(1R) Alarm(2R)
2C1-D	K(CA)	-50℃~1200℃	77(W)x35(H)	AC:17~28V DC:12~35V	Temp.
2C2-D	K(CA)	-50℃~1200℃	77(W)x35(H)	AC:17~28V DC:12~35V	Temp.(1R) Alarm(2R)

3 Part name

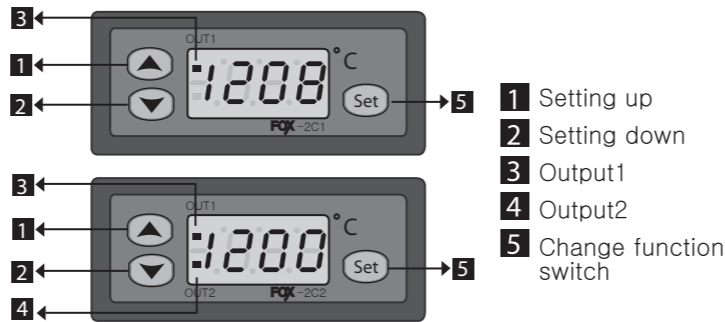

Setting temperature & programs

• setting temperature

The present temperature shall be displayed after turning on of the power supply.

If **Set** key is pressed softly, **SET** letter will be showed and then, if **Set** key is pressed again, setting temperature will be flicked.

Press **▲▼** key to change the set values

If **Set** key is pressed again, **o-L** letter shall be showed and the setting temperature value shall be saved and the present temperature shall be displayed.


• Setting programs

If **Set** key is pressed for more than 5seconds, the program mode will be proceeded as following sequences : HSP->LSP->TYP->DLT->DIF->COR->,,

The setting value of each mode should be changed by pressing **▲▼** key and then press **Set** key to move to next mode


※The set or programming mode is terminated, if you press the **Set** key for more than 2 second, parameters(set values) are saved after showing **o-L** letter or return to the present temperature automatically after 10seconds

■ Relay junction

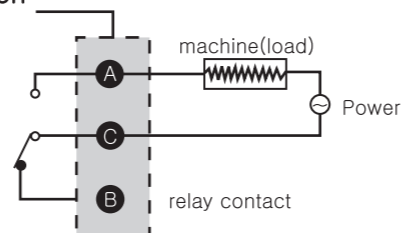

※ Relay contact capacity – less than 250VAC 2A

4 Connection

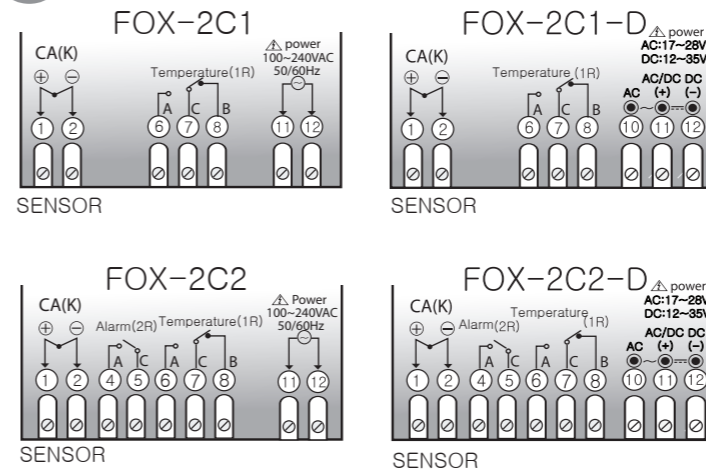

5 Terminology

• cold junction compensating circuit


If the thermocouple sensor would be connected to the input terminal of the controller, it might be some errors by bring thermally generated emf in proportion to the ambient temperature in the the contact point between the input terminal's metal and the thermocouple sensor wire. To prevent, it is embedded in cold junction compensating circuit.

• compensating wire


– It is usually used at lengthening of the cable between thermocouple sensor and the controller
– If a general cable should be used, the contact point between thermocouple wire and general wire might be some errors by becoming another thermocouple sensor . To prevent it, it should be lengthen of the same wire as thermocouple's wire.

The compensating wire usually consist of red wire for + polarity and blue(or white) one for – polarity

When using of the compensating wire, pay attention in order not to be reversed for the polarity each other

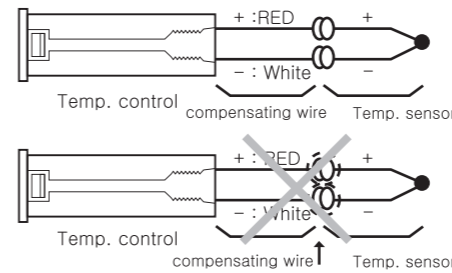


6 Dimension

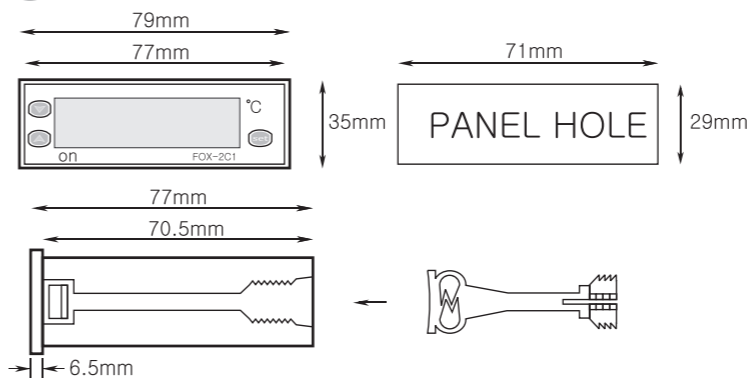


7 Sequence

Setting temperature

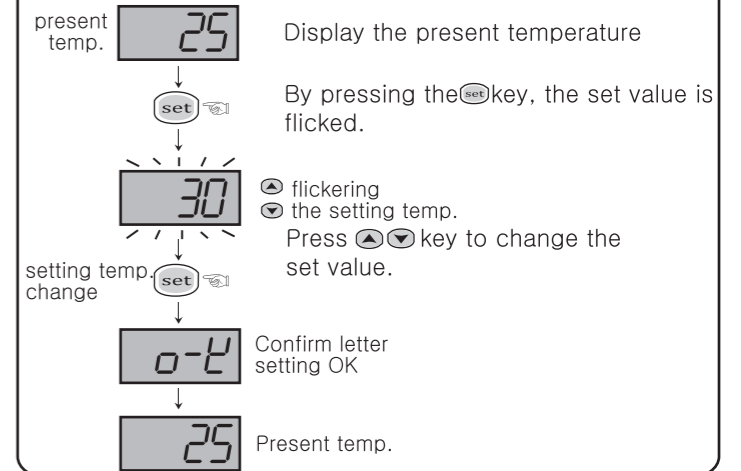

Setting for programs(2C1)

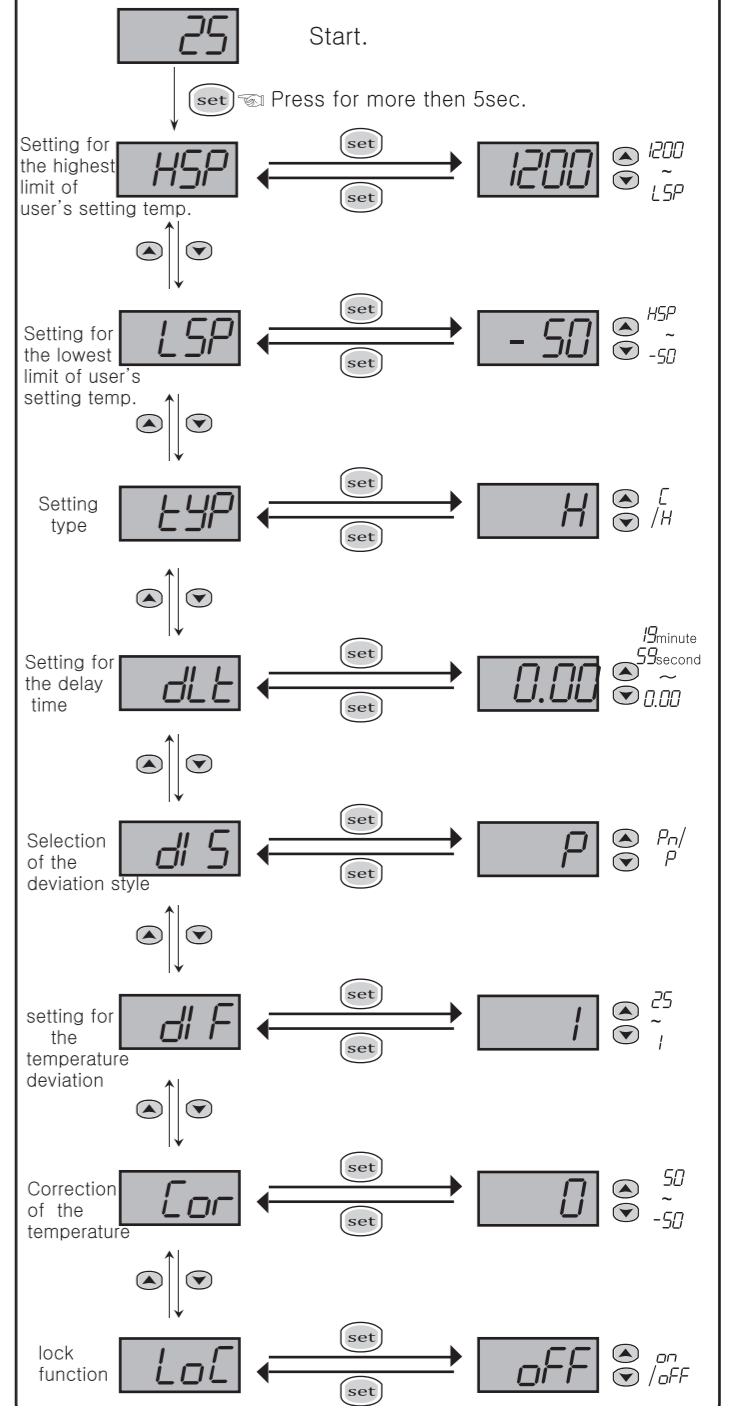

Setting for programs(2C2)

Start. 25

Press for more than 5sec.

Setting for the highest limit of user's setting temp. **HSP** → 1200 (1200 ~ LSP)

Setting for the lowest limit of user's setting temp. **LSP** → -50 (HSP ~ -50)

Setting type **LYP** → H (C / H)

Setting for the delay time **DLT** → 0.00 (19minute 59second ~ 0.0)

Selection of the deviation style **dLS** → P (Pn/P change)

setting for the temperature deviation **dIF** → 1 (50 ~ 1)

Correction of the temperature **Cor** → 0 (50 ~ -50)

selection of the alarm output **ALr** → OFF (on/off)

Selection of the alarm output type **ALy** → L (HL/H/L)

OFF deviation of out2 alarm output **AdF** → 1 (50 ~ 1)

alarm output of the highest limit **HPr** → 1200 (1200 ~ -50)

alarm output of the lowest limit **LPr** → -50 (1200 ~ -50)

lock function **LoC** → OFF (on/off)


8 Detailed manual

HSP: Setting function of the highest limit of temperature range (Maximum set point allowed to the end user)
 -Impossible to set up the set value more than **HSP** set value
 ex) **HSP** = 25°C setting → impossible to raise the set value more than 25°C

LSP: Setting function of the lowest limit of temperature range (Minimum set point allowed to the end user)
 -Impossible to set up the set value less than **LSP** set value
 ex) **LSP** = 10°C setting → impossible to lower the set value less than 10°C



LYP: Selection of the Cooling(**LoL**) & Heating(**HEt**)

DLT: Delay time of the output
 It is widely used as the followings
 -in case of operation machinery when re-input of the power supply or momentary stoppage of power supply

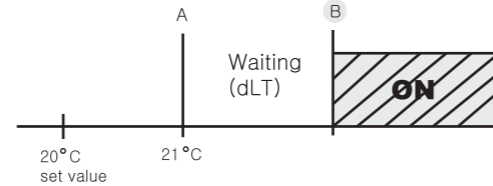


ex) If the set value is 1 :
 from **A** until **B** time → the relay is ON in the **B** point after as delay as the **DLT** setting time(1min.)
 (flickering the output lamp during the **DLT** time)

dLS: Selection of deviation style
P Output : +deviation (be off at setting point)

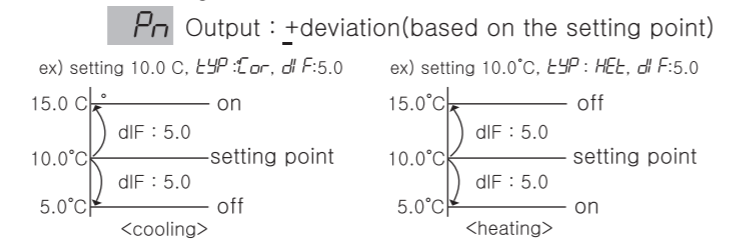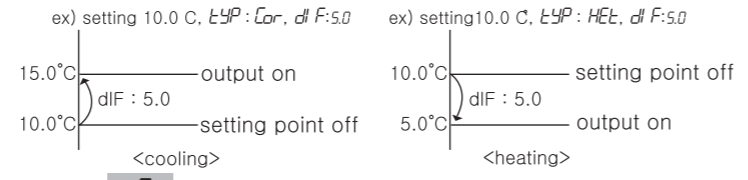

dIF: Setting for temperature deviation
 - In the ON/OFF control, it need at regular interval between ON and OFF
 - By operating the ON/OFF control frequently, the relay or its output contact can be damaged quickly and it also occurs the hunting(oscillating, chattering) by virtue of external noise. You can make use of the temperature deviation in order to protect its relay or contact and so on

ex) The method of the temp.deviation when ON/OFF control

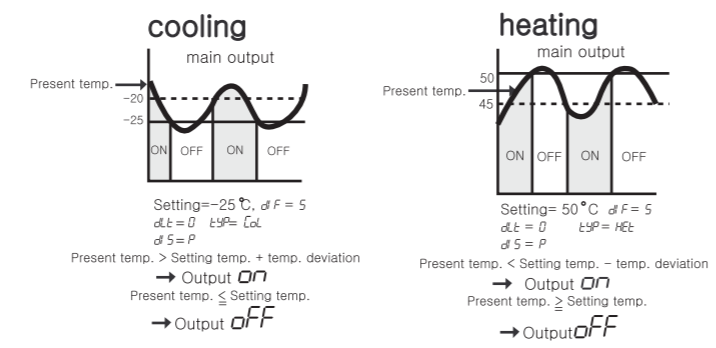


Cor: Correction of the present temperature.
 It is used for the correction of an discrepancy between the display temperature and an actual temperature.

ex) actual temp : 10°C → display : 12°C → **Cor** : 0.0 → -2 correction → 10°C display


ALr: on: alarm on
 off: alarm off

ALy: selection of the alarm


HL: alarm of the highest & lowest limit
 Output on - more than HPR setting value or less than LPR setting value

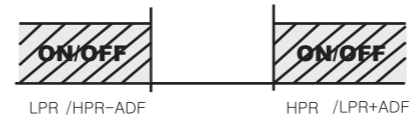

H: alarm of the highest limit
 Output on - more than HPR setting value

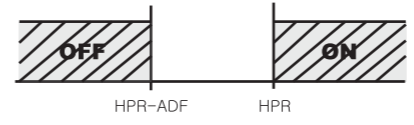

L: alarm of the lowest limit
 Output on - less than LPR setting value

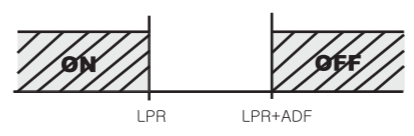


AdF: OFF deviation of Out2 alarm output

HPr: setting for highest alarm


LPr: setting for lowest alarm

LoC: on: lock function on
 off: lock function off

ex) application
 ex)Heater → turn off at 30°C ,turn on at 25°C
 How to operate(setting for the temperature&programs)?

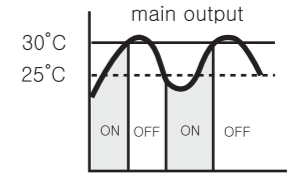

<Setting temp.> (see the setting temperature)
 setting : 30°C
 <Setting program> (see the setting for program)
LYP: HEt
dLS: P(deviation → one side, set point → off)
dIF: 5 (on/off interval → 5)
 ex)Cooler → turn off at 0°C ,turn on at 2°C
 How to operate(setting for the temperature&programs)?

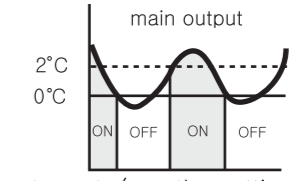

<Setting temp.> (see the setting temperature)
 setting : 0°C
 <Setting program> (see the setting for program)
LYP: LoL
dLS: P(deviation → one side, set point → off)
dIF: 2 (on/off interval → 2)

9 Temp.range&set value when deliver

Function	set value when deliver	Function	set value when deliver
HSP	1200	ALr	off
LSP	-50	ALy	L
LYP	H	AdF	1
DLT	0.00	HPr	1200
dLS	P	LPr	-50
dIF	1	LoC	off
Cor	0		

10 Error message

E1 Memory error. Turn the power off and turn it on again
 If the error message persists, please request us A/S by return
o-E Sensor error. The sensor is interrupted.Check the cable.
S-E Sensor error. The sensor is short-circuited. Check the cable

* The product's specification can be changed without any notification to improve its quality.

Alpha Therm GmbH
 Gewerbering 7
 68723 Plankstadt
 Germany
 Phone: (+49) 6202 / 575688 - 0
 Fax: (+49) 6202 / 575688 - 0
 E-Mail: sales@alpha-therm.de
 Web: www.alpha-therm.com

* This device works proper operation with :
 Ambient Temp : 0 ~ 60°C
 Ambient Humi. : below 80%RH
 Regular power : 220VAC ±10% 50/60Hz