

# PS Series (DC 3-wire)

## INSTRUCTION MANUAL

## Autonics

Follow Autonics website for the latest information.

Failure to follow this instruction may result in fire.

<b>Sensing side length</b>	<b>8 mm</b>	<b>12 mm</b>	<b>50 mm</b>
<b>Tightening torque</b>	0.7 N m	0.49 N m	0.98 N m

		Normally Open	Normally Closed
Sensing target		Presence	Presence
		Nothing	Nothing
Load		Operation	Operation
		Return	Return
Output voltage	NPN output	H L	H L
	PNP output	H L	H L
Operation indicator (red)		ON OFF	ON OFF

	Sensing side length	8 mm	12 mm	50 mm
<b>A</b>		16	24	180
<b>B</b>		16	24	130
<b>c</b>		3	5	-
<b>d</b>		15	12	120
<b>m</b>		8	12	50