W 48 × H 48 mm Power OFF Delay Analog Timers

AT8PSN / AT8PMN Series **INSTRUCTION MANUAL**

TCD220054AA

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using. For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- A symbol indicates caution due to special circumstances in which hazards may occur.

★ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.

Failure to follow this instruction may result in explosion or fire.

03. Install on a device panel to use.

Failure to follow this instruction may result in fire or electric shock.

04. Do not connect, repair, or inspect the unit while connected to a power source.

Failure to follow this instruction may result in fire or electric shock.

05. Check 'Connections' before wiring.

Failure to follow this instruction may result in fire. 06. Do not disassemble or modify the unit.

Failure to follow this instruction may result in fire or electric shock.

▲ Caution Failure to follow instructions may result in injury or product damage.

01. Use the unit within the rated specifications.

Failure to follow this instruction may result in fire or product damage

02. Use a dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in fire or electric shock.

03. Keep the product away from metal chip, dust, and wire residue which flow into the unit.

Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in 'Cautions during Use'.
- Otherwise, it may cause unexpected accidents.
- Power supply should be insulated and limited voltage/current or Class2, SELV power supply device.
- \bullet The time of min. power supply is 0.1 sec for SEC unit model, and 2 sec for MIN unit model. The operation of timer begins after turning off the power.
- When supplying or turning off the power, use a switch or etc. to avoid chattering.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- After turning off the power, change the time range, etc.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.

Do not use near the equipment which generates strong magnetic force or high

- This unit may be used in the following environments.
- Indoors (in the environment condition rated in 'Specifications')
- Altitude max, 2,000 m
- Pollution degree 2
- Installation category II

Ordering Information

This is only for reference.

For selecting the specified model, follow the Autonics website.

AT8P • Time unit

SN: SFC MN: MIN



Power supply

No mark: 200 - 240 VAC~ 50 / 60 Hz 2: 24 VAC~ 50 / 60 Hz, 24 VDC== 6: 100 - 120 VAC \sim 50 / 60 Hz 7: 100 / 110 VDC=

Product Components

Product (+ bracket)

Instruction manual


Sold Separately

• 8-pin socket: PG-08, PS-08(N)


Dimensions

• Unit: mm, For the detailed drawings, follow the Autonics website



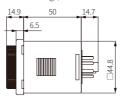




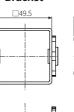





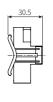



■ Panel cut-out

Unit Descriptions



| No. | Name |
|-----|---------------------------|
| 1 | Power indicator |
| 2 | Output return indicator |
| 3 | Time range display part |
| 4 | Time range setting switch |
| 5 | Time unit display part |
| 6 | Dial for the time setting |


Time Range

| Display part | Unit | Range |
|--------------|---------|----------|
| 0.5 | SEC/MIN | 0 to 0.5 |
| 1 | | 0 to 1 |
| 5 | | 0 to 5 |
| 10 | | 0 to 10 |

Connections

△ Caution

: Refer to the 'specifications' for checking the power supply and control output.

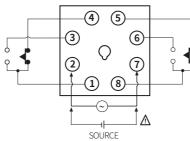


Operation Timing Chart

A contact will be ON simultaneously when supplying the power. The a contact will be OFF after T is passed.

 $\label{lem:memory retention function: Even though the setting time is changed after turning off} \\$ the power, the time limit a contact will be OFF after the previous setting time.

T: setting time

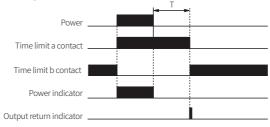

Specifications

| Model | AT8P□ | AT8P□-2 | AT8P□-6 | AT8P□-7 | | |
|------------------|---|---------|---------|---------|--|--|
| Function | Power OFF Delay | | | | | |
| Γime operation | Power OFF Start | | | | | |
| Control output | Relay | | | | | |
| Contact type | Time limit DPDT (2c) | | | | | |
| Contact capacity | 250 VAC~ 3 A, 30 VDC== 3 A resistive load | | | | | |
| Error | Repeat: $\leq \pm 0.2\% \pm 10$ ms SET: $\leq \pm 5\% \pm 50$ ms Voltage: $\leq \pm 0.5\%$ Temp.: $\leq \pm 2\%$ | | | | | |
| Approval | C € c ZNJ ss ERI | | | | | |
| Jnit weight | ≈ 100 g | | | | | |
| | | | | | | |

| Power supply | $\begin{array}{c} \textbf{200-240VAC} \sim \\ \pm \textbf{10\%,} \\ \textbf{50/60Hz} \end{array}$ | 24VAC~±10% 50/60Hz, 24VDC=±10% | $100 - 120 \text{VAC} \sim \\ \pm 10\%, \\ 50 / 60 \text{Hz}$ | 100/110 VDC== ± 10% | |
|----------------------------|---|--------------------------------------|---|------------------------|--|
| Power consumption | AC: ≤ 1.5 VA | AC: ≤ 0.2 VA DC: ≤ 0.2 W | AC: ≤ 1.5 VA | DC: ≤ 0.8 W | |
| Insulation resistive | \geq 100 M Ω (500 VDC== megger) | | | | |
| Dielectric strength | 2,000 VAC~ at 50 / 60 Hz for 1 min | | | | |
| Noise immunity | $\pm2\text{kV}$ square-wave noise by noise simulator (pulse width $1\mu\text{s}$) | | | | |
| Vibration | 0.75 mm double amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 1 hour | | | | |
| Vibration (malfunction) | $0.5\mathrm{mm}$ double amplitude at frequency of 10 to $55\mathrm{Hz}$ (for $1\mathrm{min}$) in each X, Y, Z direction for $10\mathrm{min}$ | | | | |
| Shock | 300 m/s² (≈ 30 G) in each X, Y, Z direction for 3 times | | | | |
| Shock (malfunction) | $100 \text{m/s}^2 (\approx 10 \text{G}) \text{In each X, Y, Z direction for 3 times}$ | | | | |
| Relay life cycle | Mechanical: \geq 10,000,000 operations Electrical: \geq 100,000 operations (250 VAC \sim 3 A resistive load) | | | | |
| Ambient temperature | -10 to 55 °C, storage: -25 to 65 °C (no freezing or condensation) | | | | |
| Ambient humidity | 35 to 85%RH, storage: 35 to 85%RH (no freezing or condensation) | | | | |

18, Bansong-ro 513Beon-gil, Haeundae-gu, Busan, Republic of Korea, 48002 www.autonics.com | +82-2-2048-1577 | sales@autonics.com

Autonics