

Relay Terminal block (4/16/32-point)

ABS Series  
INSTRUCTION MANUAL

TCD210105AA

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using.

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

Safety Considerations

- Observe all ‘Safety Considerations’ for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ **Warning** Failure to follow instructions may result in serious injury or death.

**01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.**(e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)  
Failure to follow this instruction may result in personal injury, economic loss or fire.

**02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.**  
Failure to follow this instruction may result in explosion or fire.

**03. Do not connect, repair, or inspect the unit, remove connector, or change Relay while connected to a power source.**  
Failure to follow this instruction may result in fire or electric shock.

**04. Do not disassemble or modify the unit.**  
Failure to follow this instruction may result in fire or electric shock.

⚠ **Caution** Failure to follow instructions may result in injury or product damage.

**01. Use the unit within the rated specifications.**  
Failure to follow this instruction may result in fire or product damage.

**02. Use a dry cloth to clean the unit, and do not use water or organic solvent.**  
Failure to follow this instruction may result in fire or electric shock.

**03. Keep the product away from metal chip, dust, and wire residue which flow into the unit.**  
Failure to follow this instruction may result in fire or product damage.

**04. Do not use the product when a screw of terminal is loosened.**  
Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in ‘Cautions during Use’. Otherwise, it may cause unexpected accidents.
- Check the polarity of power or COMMON before connecting PLC or other controllers.
- Do not touch the unit immediately after the load power is supplied or cut. It may cause burn by high temperature.
- 24VDC≒ power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Wire as short as possible and keep away from high voltage lines or power lines, to prevent surge and inductive noise. Do not use near the equipment which generates strong magnetic force or high frequency noise (transceiver, etc.). In case installing the product near the equipment which generates strong surge (motor, welding machine, etc.), use diode or varistor to remove surge.
- This unit may be used in the following environments.
  - Indoors (in the environment condition rated in ‘Specifications’)
  - Altitude max. 2,000 m
  - Pollution degree 2
  - Installation category II

Product Components

- Product
- Instruction manual
- Two Way Ejector
- 4-point model: 4-pin 7.62 mm pitch jumper bar (JB-7.62-04)
- 16-point model: 8-pin 7.62 mm pitch jumper bar (JB-7.62-08)

Sold Separately




- 7.62 mm pitch jumper bar (4-pin: JB-7.62-04, 8-pin: JB-7.62-08)
- I/O cable

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

ABS	-	①	②	③	-	④	N
① Connector type				③ Relay type			
S: Screw				TN: TAKAMISAWA(Fujitsu) NYP			
H: Hirose connector				PA: MATSUSHITA(Panasonic) PA			
② Number of relay				④ Input logic			
04: 4-point				C: COM None			
16: 16-point				N: NPN (+COM)			
32: 32-point				P: PNP (-COM)			

Specifications

Model	ABS-S04□□-CN	ABS-H16□□□	ABS-H32□□□
Applied relay <sup>(a1)</sup>	PA: APAN3124 [MATSUSHITA (Panasonic)] / TN: NYP24W-K [TAKAMISAWA (Fujitsu)]		
Output method	1a	1a	1a
Power supply	≤ 24 VDC≒ ± 10 %	≤ 24 VDC≒ ± 10 %	≤ 24 VDC≒ ± 10 %
Current consumption	PA: ≤ 8 mA <sup>(a2)</sup> TN: ≤ 8.5 mA <sup>(a3)</sup>	PA: ≤ 8 mA <sup>(a2)</sup> or ≤ 13 mA <sup>(a3)</sup> TN: ≤ 8.5 mA <sup>(a3)</sup> or ≤ 13.5 mA <sup>(a3)</sup>	
Rated load voltage & current <sup>(a4) (a5)</sup>	250 VAC~ 3A, 30 VDC≒ 3A	250 VAC~ 3A, 30 VDC≒ 3A	250 VAC~ 2A, 30 VDC≒ 2A
No. of connector pins	-	20	40
Connector for controller side	-	20-pin Hirose (HIF3BA-20PA-2.54DSA)	40-pin Hirose (HIF3BA-40PA-2.54DSA)
No. of relay points	4	16	32 (8组/1COM)
Terminal type	Screw	Screw	Screw
Terminal pitch	7.62 mm	7.62 mm	7.62 mm
Indicator	Operation indicator: blue	Power indicator: red, operating and disconnection indicator: blue	Power indicator: red, operating and disconnection indicator: blue
Varistor	None	None	None
Input logic	-	NPN / PNP model	NPN / PNP model
Material	CASE, BASE: MPPO, terminal pin: brass	CASE: MPPO, BASE: PA66 (G25%), terminal pin: brass	CASE: MPPO, BASE: PA66 (G25%), terminal pin: brass
Approval	CE  ENEC <sup>(a6)</sup>	CE  ENEC <sup>(a6)</sup>	CE  ENEC <sup>(a6)</sup>
Unit weight (packaged)	PA: ≈ 68 g (≈ 104 g) TN: ≈ 71 g (≈ 107 g)	PA: ≈ 224 g (≈ 307 g) TN: ≈ 235 g (≈ 318 g)	PA: ≈ 345 g (≈ 438 g) TN: ≈ 370 g (≈ 463 g)

- 01) For the detailed information about each relay, please refer to ‘Power Relay’ or data sheet from the manufacturer.  
02) It is current consumption for a relay including LED current.  
03) It is current consumption including LED current for power part to 2).  
04) This value is rated with resistive load.  
05) When connecting loads to output part, please connect loads of same power type. Connecting loads of different power type may cause safety issues.  
06) 30 VDC≒ of rated load voltage is not subjected to UL Listed.

Insulation resistance	≥ 1,000 MΩ (500 VDC≒ megger)
Dielectric strength (coil-contact)	3,000 VAC~ 50/60 Hz for 1 minute
Dielectric strength (same polarity contact)	PA: 1,000 VAC~ 50/60 Hz for 1 minute TN: 750 VAC~ 50/60 Hz for 1 minute
Vibration	0.75mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours
Vibration (malfunction)	0.75mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 10 min
Shock	500 m/s <sup>2</sup> (≈ 50 G) in each X, Y, Z direction for 3 times
Shock (malfunction)	147 m/s <sup>2</sup> (≈ 15 G) in each X, Y, Z direction for 3 times
Ambient temperature	-15 to 55 °C, storage: -25 to 65 °C (no freezing or condensation)
Ambient humidity	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)
Applicable wire -stranded	AWG 22-16 (0.30 to 1.25 mm <sup>2</sup> )
Tightening torque	0.5 to 0.6 N・m


Crimp Terminal Specifications

- Unit: mm, Use the UL approved crimp terminal.



Replacing Relay


1. Disassemble a relay by using Two Way Ejector for relay replacement inside the product.

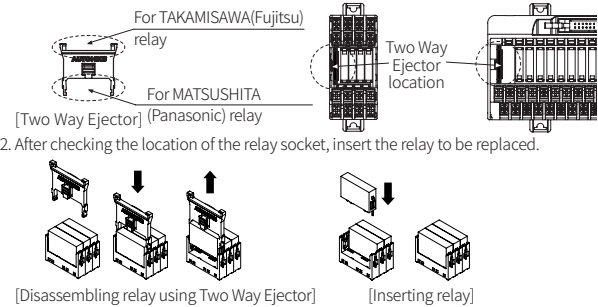


Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.

■ 4-point

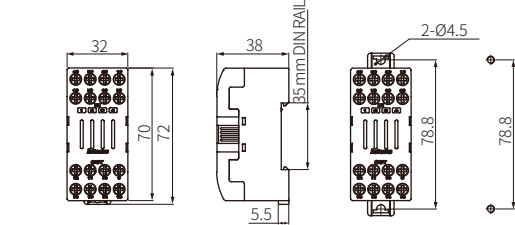

■ 16-point, 32-point

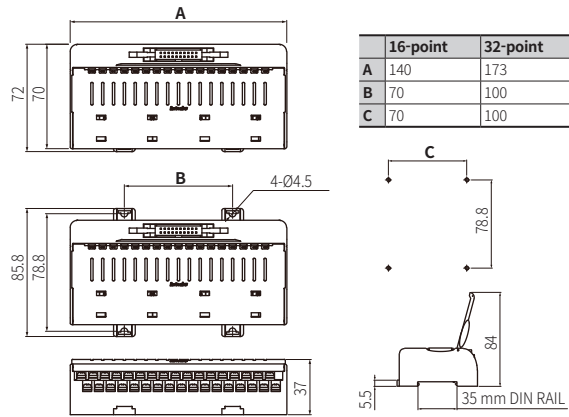


Installation

■ DIN Rail


- Mounting

- Pull the Rail lock on the rear of the product to the direction ①.
- Hang DIN rail hook on the rear of the product onto DIN rail.
- Push the product to the direction ②, and push the Rail lock to the direction ③ to fix onto the DIN rail.

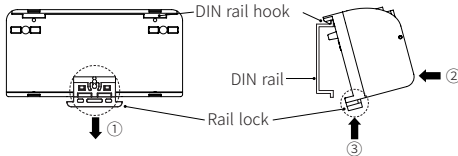

- Removing

- Insert a tool such as screwdriver into the hole of Rail lock.
- Push the toll to the direction ① and pull the Rail lock.
- Lift bottom of the product to the direction ② and remove the product from DIN rail.

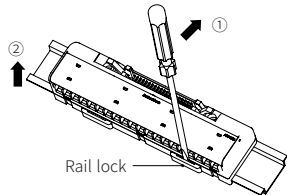

■ Panel

Product with the mounting hole can be installed on panel with screw.


It is recommended to use M4×15 mm of spring washer screws.

If you use flat washer, its diameter should be Ø 6 mm.

Tighten the screw with the tightening torque of 0.7 to 1.0 N・m.

7.62 mm Pitch Jumper Bar

- Using a nipper, cut the notches on the jumper bar as much as you need.
- Loosen the screws which are needed to be common.
- Insert the jumper bar under the loosen screws.
- Tighten the screws.

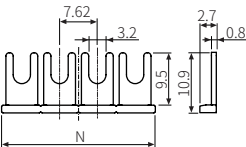


Model	The number of jumper pin	N
JB-7.62-04	4	29.5
JB-7.62-08	8	60.0


Wire Connection

■ Wire connection


- 4-point

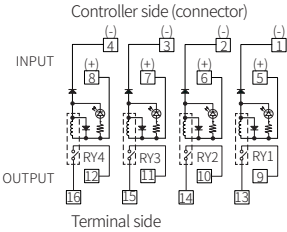

- 16-point NPN

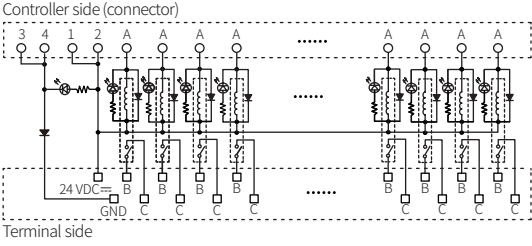


- 16-point PNP

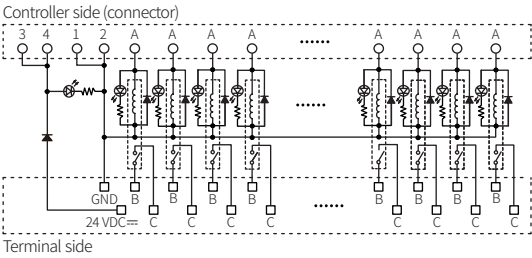


A	Pin	20	18	16	14	12	10	8	6	19	17	15	13	11	9	7	5
B	Upper terminal	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F
	Low terminal	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F

- 32-point NPN

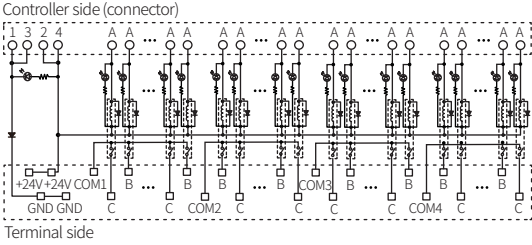

- 32-point PNP

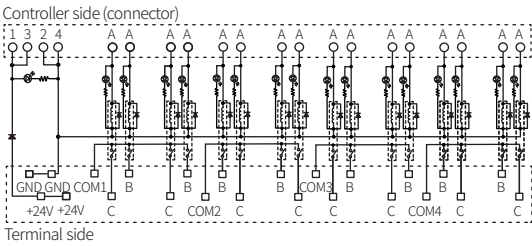


A	Pin	40	38	36	34	32	30	28	26	24	22	20	18	16	14	12	10
COM	COM	COM1								COM2							
	Upper terminal	-	01	-	03	-	05	-	07	08	-	0A	-	0C	-	0E	-

A	Pin	39	37	35	33	31	29	27	25	23	21	19	17	15	13	11	9
COM	COM	COM3								COM4							
	Upper terminal	-	11	-	13	-	15	-	17	18	-	1A	-	1C	-	1E	-

■ Hirose connector pin arrangement

- 20-pin connector

Hirose (HIF3BA-20PA-2.54DSA)



- 40-pin connector

Hirose (HIF3BA-40PA-2.54DSA)

